

Quick Guide

Turnkey Kit - Initial Connection

Introduction

Thank you for buying the Rosslare turnkey kit. This quick guide will assist you through your initial connection. For more detailed instructions, please refer to each component's manual, which can be found on our website.

Kit Contents

- Access control panel
- 2 readers, 25 credentials (AC-225IP)
- 4 readers, 50 credentials (AC-825IP)
- Mini-PC

Mini-PC Accessories

- HDMI to VGA adapter
- HDMI to HDMI cable
- Power supply for Mini-PC


Mounting Accessories for Access Control Panels

	AC-225IP	AC-825IP
Mounting screws	3 (M3.5 x 32)	5 (#10 x 1-1/4")
Wall anchors	3	5
Metal enclosure keys	2	2
EOL resistor kit (2.2K and 8.2K)	4 each	4 each
Terminal block extraction tool		1
Power cable		1
Power lock kit		1


Mounting Accessories for Readers

	AC-225IP	AC-825IP
Mounting screws (M3 x 25)	4	8
Wall anchors	4	8
Pin Torx security screws	2	4
Pin Torx key tool	1	1
Mounting template labels	2	4

Connectivity

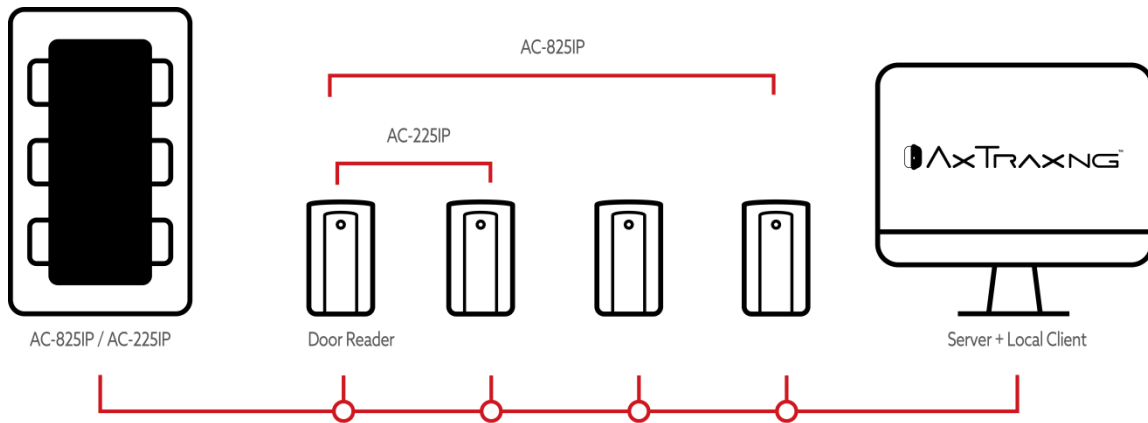

1. Connect the Mini-PC to the power using the included power supply.
2. Connect a HDMI monitor. If you don't have one, connect a HDMI to DVI adapter or consult a Rosslare representative.
3. Connect a keyboard and a mouse to the Mini-PC using the two USB ports of the Mini-PC.
4. Connect the Mini-PC to your LAN using an Ethernet cable.
5. Connect the access controller to the same LAN as the Mini-PC using an Ethernet cable.
6. Turn the Mini-PC on by pressing the power button for 2 seconds. A blue LED should appear. The Mini-PC shows the AxTraxNG Ultralight software pre-installed.

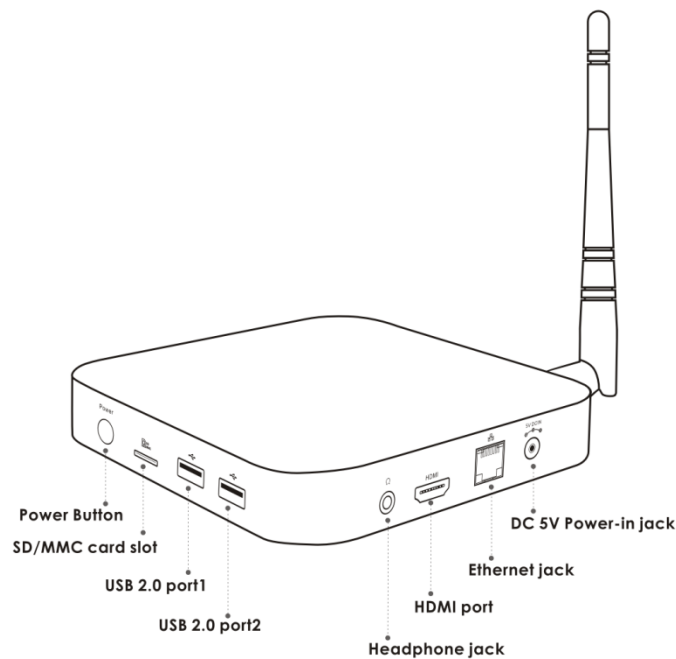

Information

Learn more about all our product range at www.rosslaresecurity.com

