

Technical Note

Firmware update procedure for x-805 expansion units


10 Dec 2020

1. SUMMARY

This technical note describes how to update an x-805 expansion unit using HyperTerminal.

2. CONNECTION

1. Connect the MD-14S/U to the x-805 as follows:
 - a. Red: (+) 12V
 - b. Black: (-) GND
 - c. Orange: RSDP-bus A
 - d. Brown: RSDP-bus B

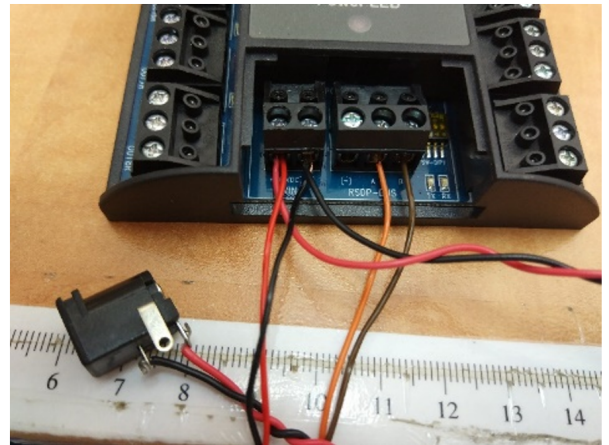

3. FW UPDATE PROCESS


1. Connect the MD-14S/U to your PC.
2. Identify the COM port of the MD-14S/U.
3. Launch the HyperTerminal on your PC.




If your OS does not have HyperTerminal, you can download it [HERE](#).

4. Select the COM port to which the MD-14S/U is connected.


5. Set the COM port properties as follows:
 - Bits per second: 57600
 - DATA bits: 8
 - Parity: None
 - Stop Bits: 1
 - Flow control: None
6. When connected, go to **Transfer > Send File**.
7. Browse to the applicable *.bin file and select it.
8. Set the protocol to **Ymodem**.

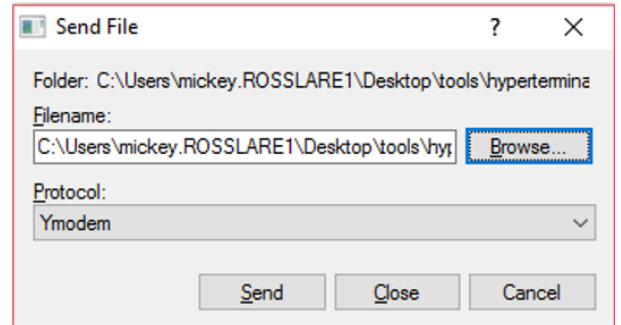

9. Click **Send**.
10. Power on the x-805.
11. You can see the progress of the FW downloaded.

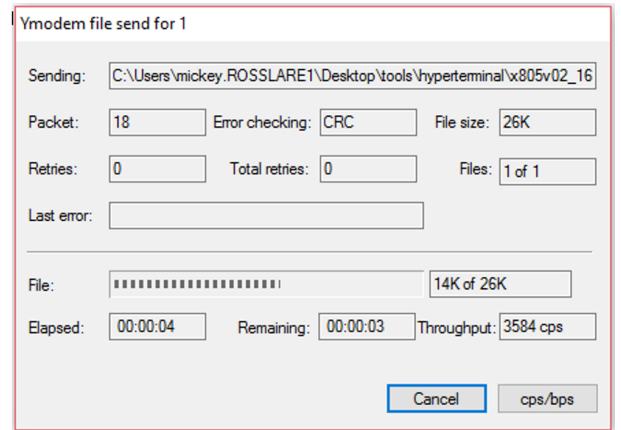

12. When the process is complete, you can see the x-805 version number on the HyperTerminal negotiation screen.

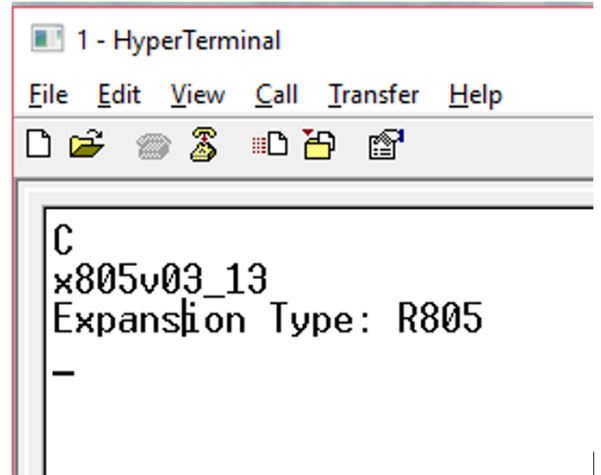

For more information regarding support, visit <https://support.rosslaresecurity.com/portal/en/home>.