





How To Activate AxTraxNG License

To activate AxTraxNG license follow those steps:


1. place the license file "License M&1.license" on your Desktop PC.
2. From AxTraxNG client select Help, Registration:

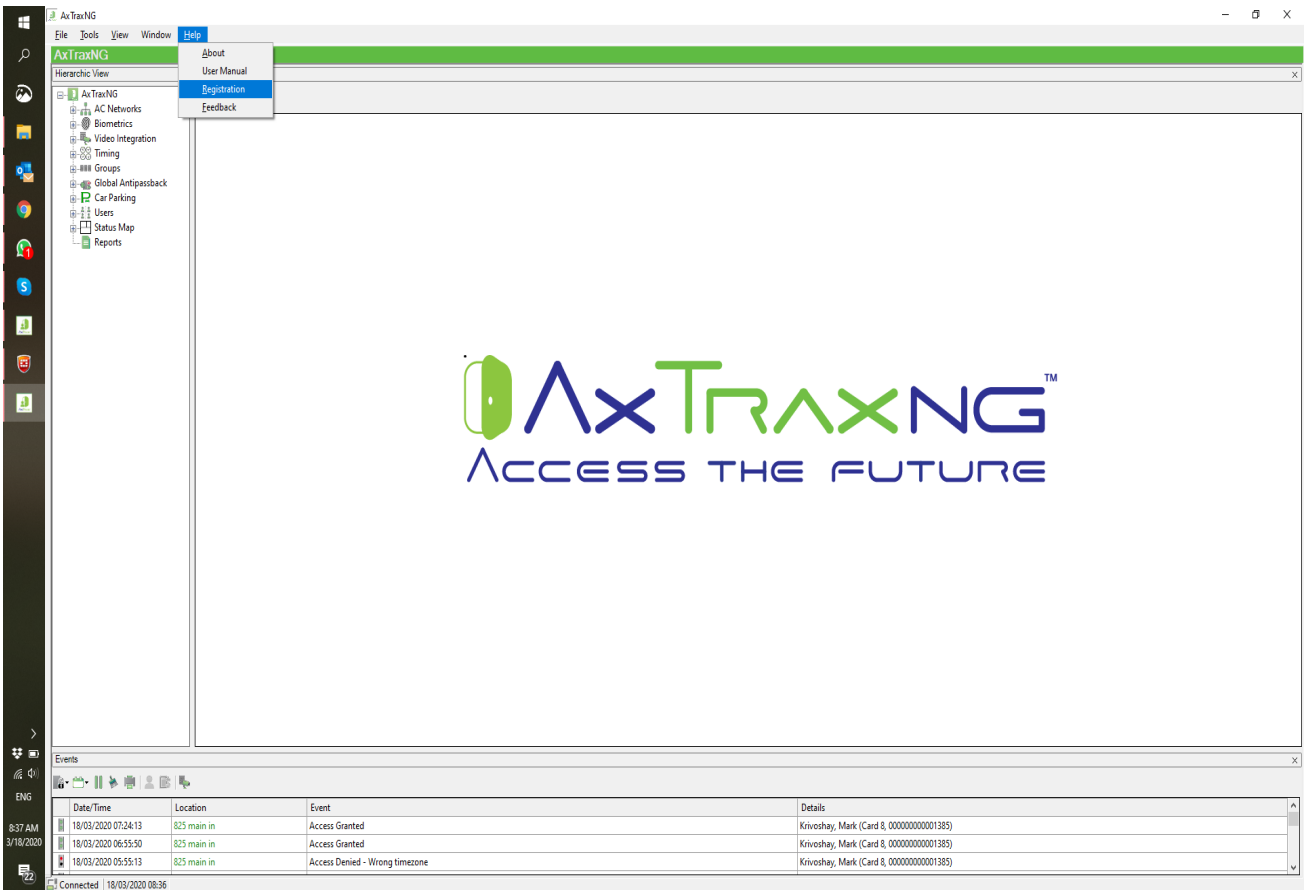

3. Click the 3 dots button and Browse to the Desktop and select the License file:

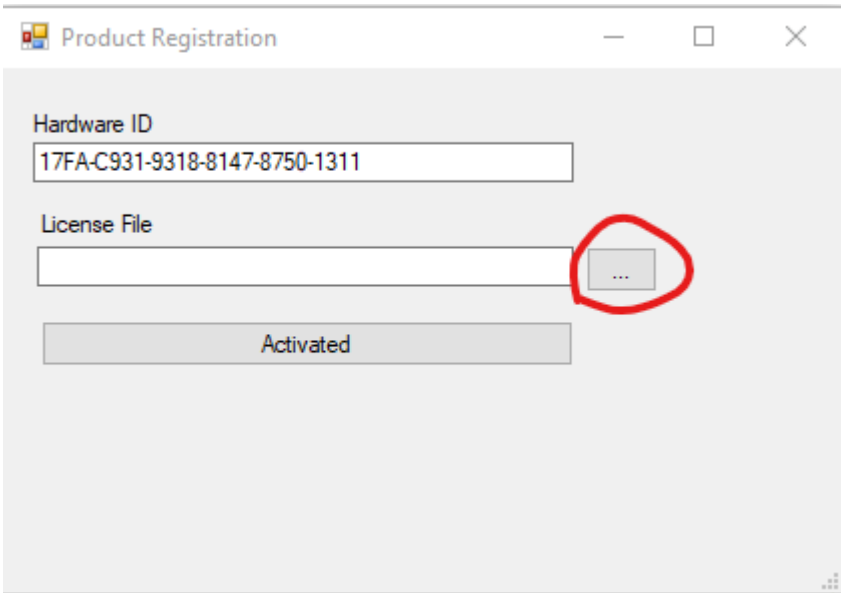

4. Click "Activated" button:

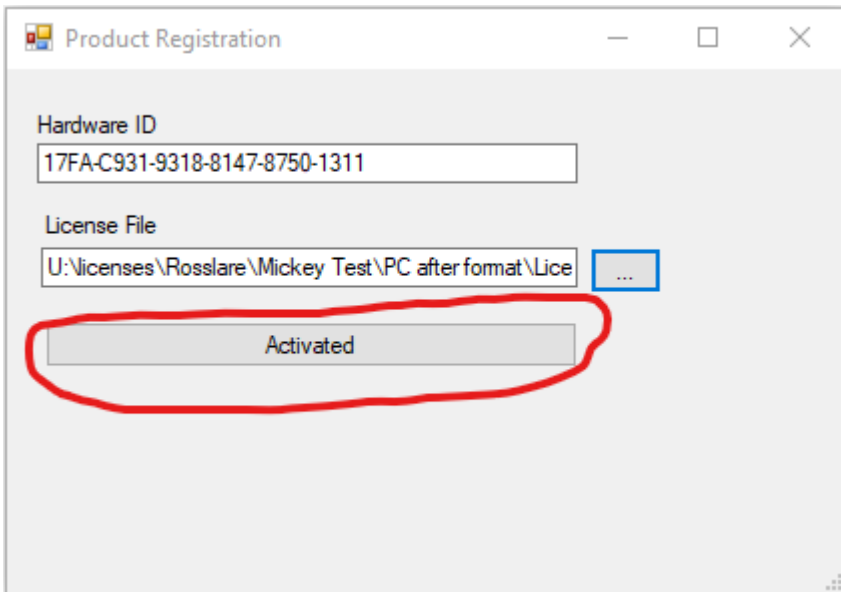

5. The server service will be restart.

<https://support.rosslaresecurity.com/portal/en/kb/articles/how-to-activate-axtraxng-license>